

ENG

⚠ Carefully read all instructions before operating the appliance and save them for future reference. By carefully following these instructions you can considerably prolong the service life of your appliance.

The safety measures and instructions contained in this manual do not cover all possible situations that may arise during the operation of the appliance. When operating the device the user should be guided by common sense, be cautious and attentive.

IMPORTANT SAFEGUARDS

- The manufacturer is not responsible for injuries caused by failure to comply with the safety requirements and operation rules of the appliance.
- This appliance is intended to be used for nonindustrial use in household and similar spheres of application. Industrial application or any other misuse will be regarded as violation of proper service conditions. Should this happen, manufacturer is not responsible for possible consequences.
- Before plugging in the appliance ensure that the circuit voltage matches operating voltage of the appliance (see technical specifications or manufacturer's plate on the appliance).
- Unplug the device during a thunderstorm, if it's not used for a long time or when cleaned
- Do not operate the appliance outdoors If water or any foreign object gets into the device housing it may result in serious damage of the appliance.
- Always unplug the device and let it cool down before cleaning. Follow cleaning and general maintenance guidelines when cleaning the unit.

STOP DO NOT immerse the housing in water!

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children without supervision.
- No modifications or adjustments to the product are allowed. All the repair works should be carried out by an authorized service centre. Failure to do so may result in device and property damage or injury.

STOP CAUTION! Do not use the appliance in case of any malfunctions.

Technical Specifications

Model.....RED SkyCenter 12S
Voltage..... 220-240 V~, 50 Hz
Power..... 7 W
Electrical safety.....class I
Body material..... heat-resistant plastic
Indication.....LED
Type of control.....electronic, remote («Sky. Умный дом и сервисы»)

Data transmission standard.....Bluetooth v4.0,Wi-Fi
Supported operating systems.....iOS,Android
Protection against rapid voltage change.....yes
Overall dimensions.....90 × 40 × 65 mm
Net weight.....90 g

Package Includes

Smart control center.....1 pc.
User manual.....1 pc.

The manufacturer reserves the right to make any modifications to design, packaging, or technical specifications of the product without prior notice. The specification allows an error of ±10%.

Parts of the appliance A1

- Housing
- Indicator
- Control button
- Switch

I. PRIOR TO FIRST USE

Carefully remove the multicooker and its accessories from the packaging. Dispose of all packaging materials.

⚠ Keep all warning labels, including the serial number identification label located on the housing.

After transportation or storage at low temperatures allow the appliance to stay at room temperature for at least 2 hours before using.

Before operating, make sure that the device has no dents, cracks or any other visible damages.

II. OPERATION

The smart control center allows you to control household appliances from around the world via the Internet: it will become a bridge between «Sky. Умный дом и сервисы» devices at home and your mobile device.

- Download the software from the App Store or Google Play (depending on your operating system) onto your smartphone or tablet.

i For the minimum supported OS version, see the company's official website www.redbt.company or the application description at the App Store and Google Play.

- Start the «Sky. Умный дом и сервисы» app, create an account, and follow the prompts appearing on the screen.
- Connect the device to the power network
- Set the switch to the "I" position: the indicator on the device will blink.
- Select the device to be connected from the device catalog in the application and follow the pop-up tips. When switching to the synchronization mode the indicator will be blinking, it will light up when the synchronization is complete.

i If the connection isn't made within 30 seconds, the appliance will switch to the standby mode.

To remotely control your devices on the base of the «Sky. Умный дом и сервисы» technology connect them to the smart control centre according to their user manuals.

i In order to maintain a stable connection the smart control center remote controller must be placed no more than 15 meters away from the appliances connected to it.

Ensure that your home router supports the UDP.

You can connect several mobile devices to the smart control centre, that means several users can control one and the same device. In this case the device will perform the last received command. To do so, synchronize the second mobile device with the appliance by repeating the step 5.

- To turn the device off, set the switch to the "0" position, unplug the device.
- To disable the remote control feature and delete information about previously connected devices, press and hold down the control button for about 10 seconds, the indicator will blink, go out and then light up again. Release the button, the appliance will switch to the standby mode, the indicator will go out.

III. CLEANING AND MAINTENANCE

Before you start cleaning the appliance, make sure that it is unplugged. Use soft damp cloth or sponge to clean the housing.

STOP DO NOT immerse the housing in water or wash it under running water! Prevent moisture from getting on contact pins or inside the housing.

DO NOT use a sponge or tissue with hard or abrasive surface or abrasive pastes. DO NOT use any chemically aggressive substances.

Storage and transportation

Store the assembled appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, do not expose the device to mechanical stress that may lead to damage of the device and/or violation of the package integrity.

Keep the device package away from water and other liquids.

IV. BEFORE CONTACTING SERVICE CENTER

Problem	Possible cause	Solution
The unit does not switch on	Voltage supply failure	Check the voltage supply
	Electrical outlet is not working properly	Connect to properly working electrical outlet
The attempt of synchronizing has failed	Bluetooth function on the mobile device is disabled	Enable Bluetooth function on the mobile device
	«Sky. Умный дом и сервисы» app on the mobile device is deactivated	Run the «Sky. Умный дом и сервисы» app on the mobile device
	Sync devices are too far	Ensure devices are located within 15 metres from each other

i In case you didn't manage to eliminate the defects, please, refer to the authorized service centre.

NOTE! In case any failure occur in the operation of the Sky. Умный дом и сервисы app, it is not obligatory to apply to the service centre. Apply to RED technical support service and obtain the consultation of our specialists on error elimination and/or failure in Sky. Умный дом и сервисы operation. Your comments and suggestions concerning application operation will be taken into account upon successive update. Contact data of user support service of RED appliances can be found in your country on the website www.redbt.company. You may also obtain the help, filling the contact form provided on the website.

V. PRODUCT WARRANTY

This product is warranted for a period of 12 months from the date of purchase or from the date of manufacture of the product (if the date of sale cannot be determined). During the warranty period, the manufacturer undertakes to remedy any manufacturing defects by repairing, replacing parts or replacing the entire product.

The warranty comes into effect only if the date of purchase is confirmed by the seal of the store and the signature of the seller on the original warranty card. This warranty is valid only if the product has been used in accordance with the instruction manual, has not been repaired, disassembled or damaged as a result of improper handling, and the complete set of the product has been preserved. This warranty does not cover normal wear and tear of the product. This warranty does not apply to products used for industrial and/or commercial purposes.

The warranty does not cover products damaged by:

- improper operation, careless handling, incorrect connection, non-observance of the manual hereto;
 - mechanical, thermal and other damage caused by improper operation, negligence or accident;
 - untimely cleaning of filters, dust collectors and other parts and accessories that require periodic cleaning and replacement;
 - ingestion of foreign objects, liquids, insects, rodents, etc.;
 - damage to electrical cords;
 - connection to a network with a voltage different from that specified in the operating rules for the product, or if the parameters of the supply network do not correspond to the standard ones;
 - unskilled repairs and other interventions that led to changes in the design of the product;
 - change or removal of the serial number, or if the serial number is printed illegibly.
- The warranty does not apply to units, mechanisms and accessories that have a natural wear and tear (brushes for vacuum cleaners, metal bowls for multicookers and baking dishes with non-stick coating, mesh-knife for juicers, knives, dust bags, replaceable filters, shampoos, liquids, etc), as well as

accumulators and batteries. According to the instruction manual, periodic maintenance work on the product is not covered by the warranty.

The service life of the product and the period of validity of warranty obligations for it are calculated from the date of sale or from the date of manufacture of the product (if the date of sale cannot be determined).

The date of manufacture of the device can be found in the serial number located on the identification sticker on the product case. The serial number consists of 13 characters. The 6th and 7th characters indicate the month, the 8th - the year of manufacture of the device.

0 0 0 0 0 0 1 1 2 3 3 3 3 3

1 - month of production (01 - January, 02 - February ... 12 - December), 2 - year of production (1 - 2021, 2 - 2022 ... 0 - 2030), 3 - serial number of the model

The manufacturer's specified lifetime of the device is 3 years from the date of purchase, provided that the product is used in accordance with this manual, applicable technical standards and subject to the conditions of warranty service.

If you have any issues while using the appliance, please contact RED solution's User Support Service: app_support@redbt.company.



The packaging, the instruction manual, and the instrument itself must be disposed of in accordance with the local waste disposal program. Do not dispose of these products with common household waste.

Заполняется фирмой-продавцом / Сатушы фирма толтырады / To be filled out by the company of the seller

Гарантийный талон № / № кепілдік талон / Warranty service coupon №

Вид техники / Техниканың түрі / Appliance	Модель / Үлгі / Model
Дата продажи / Сатылған күні / Purchase date	Серийный номер / Сериялық нөмір / Serial Article Number

Фирма-продавец / Сатушы фирма / Company of the seller

Подпись продавца / Сатушының қолы / Seller's Signature	Печать фирмы-продавца / Сатушы фирманың мөрі / Impress of the Company of the Seller
--------------------------------------------------------	-------------------------------------------------------------------------------------

Изделие надлежащего качества, укомплектовано, технически исправно, претензий не имею. С условиями гарантии ознакомлен.

Бұйымның сапасы жарамды, жинақталған, техникалық жөн, шағымым жоқ. Кепілдік шарттарымен таныстым.

The appliance is of appropriate quality, in complete set and in full order. I have no claims, and have been acquainted with the warranty service terms and conditions.

Подпись покупателя / Сатып алушының қолы / Customer's signature

Информация о произведенных ремонтах / Жасалған жөндеулер туралы деректер / Information on repairs made

Гарантийный талон №/ № кепілдік талон / Warranty service coupon №

Дата приема / Кабылданған күні / Reception Date	Дата выдачи / Берілген күні / Collection Date
-------------------------------------------------	-----------------------------------------------

Заявленный дефект/ Мәлімделген ақау / Claimed defect

Описание ремонта / Жөндеудің сипаттамасы / Repair Description

Подпись / Қолы / Signature

Печать сервисного центра/ Сатушы / Impress

EAC

Изготовитель: ShenZhen XinDaXing Electric Technology Co.,Ltd. Адрес: Этаж 5А, здание С2, город Хэнфэн, №739, направление Чжоуши, городской округ Хэчжоу, улица Ханчэн, район Баоань, Шэньчжэнь, Китай.

© RED solution. Все права защищены. 2023

Воспроизведение, передача, распространение, перевод или другая переработка данного документа или любой его части без предварительного письменного разрешения правообладателя запрещены.

Bluetooth является зарегистрированным товарным знаком компании Bluetooth SIG, Inc.

App Store является знаком обслуживания Apple Inc., зарегистрированным в США и других странах.

Google Play является зарегистрированным товарным знаком компании Google Inc.